

Biffi ICON3000

Partial Stroke Test



This page is intentionally left blank

Table of Contents

Section 1: Partial Stroke Test (PST)	
Partial Stroke Test (PST)	1
Section 2: Parameters of Partial Stroke Test	
Parameters of Partial Stroke Test.....	3
Section 3: Command to Initiate the PST Cycle	
Command to Initiate the PST Cycle.....	4
Section 4: Reset of PST Cycle	
Reset of PST Cycle	5
Section 5: PST Curves and PST Baseline	
PST Curves and PST Baseline	6
Section 6: PST Report and Warning	
PST Report and Warning	7
Section 7: Remote Signalling	
Remote Signalling.....	8
Section 8: Local Operator Interface	
8.1 Procedure to Initiate PST by Local Command	9
8.2 Procedure to Select the Baseline	9
8.3 Procedure to Set PST Parameters	10

This page is intentionally left blank

NOTICE

This manual gives instruction regarding only the Partial Stroke Test function; detailed and complete information for setting and control of the Electric Actuator are available in its Installation, Operation and Maintenance Manual, VCIOM-08500-EN which is part of the mandatory instruction documentation.

WARNING

It is assumed that installation, setting, commissioning, maintenance and repair works on the actuator are carried out by qualified personnel and checked by responsible specialists.

Section 1: Partial Stroke Test (PST)

The function Partial Stroke Test (PST) is used to check the actuator and valve functionality while they are in service in the pipeline. The test is performed only if the actuator is fully open or closed. The features described in this document are applicable on both ICON3000 and ICON3000v2 actuators. The ICON3000v2 actuator can be recognized because when it is switched on, the name ICON3000v2 appears on the local screen, as shown in Figure 1.

Figure 1



PST function is available only if the setting of parameter “Restricted, Interlock mode” is “Advanced.” In the above condition, the hardwired inputs B4 and B5 of the terminal board work as input commands to initiate the PST cycle. Firmware version of the actuator base card should be ≥ 9.00 .

Table 1 shows the operation of the above inputs in function of parameter “Interlock mode,” in the “VIEW and SETUP menu, Restricted” (see Installation, Operation and Maintenance Manual, VCIOM-08500-EN).

Table 1.

Restricted, Interlock mode	Terminal B4 of the terminal board	Terminal B5 the terminal board
Advanced	PST in Open direction	PST in Close direction
Standard	Interlock in Open direction	Interlock in Close direction

The PST cycle (Partial Stroke Test) consists in the following steps:

- To drive the electrical motor to move the valve to the configured position (PST travel)
- To measure the time to reach the configured position (T-PST)
- To stop the motor when configured position is reached and measure the over-travel % (OV-TR)
- To stay in position for a configured time
- To drive the motor to move the valve in opposite direction to the initial position
- To measure the time to return to the initial position (T-RET)

Figures 2 and 3 show the actuator position % versus time in case of PST in closing and opening direction.

Figure 2


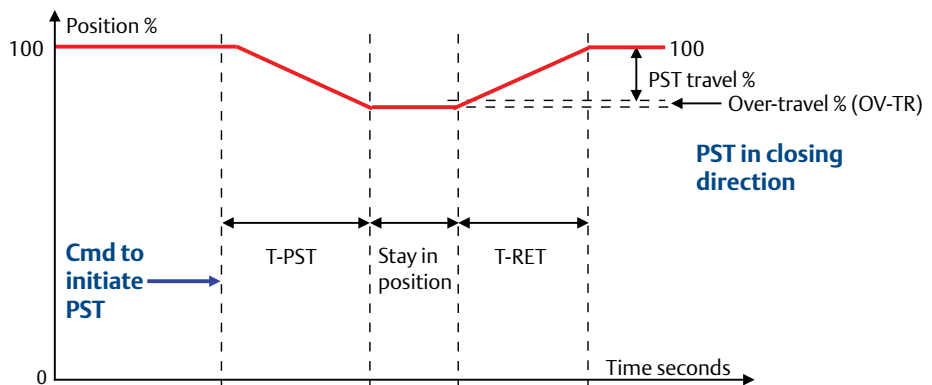


Figure 3

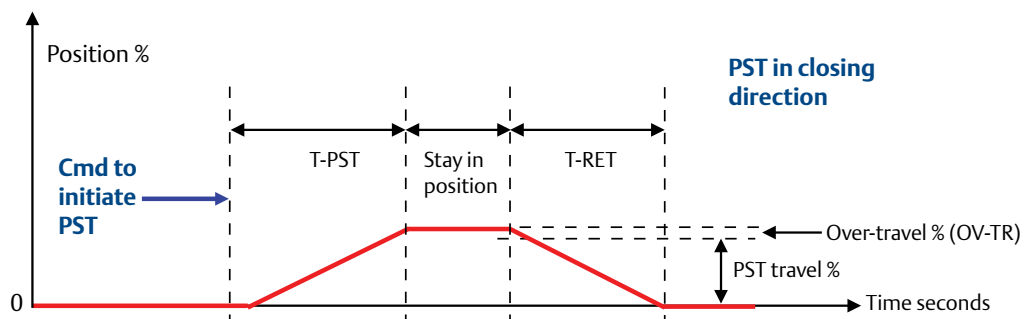

Section 2: Parameters of Partial Stroke Test

The following parameters are available in the local operator interface of the actuator, VIEW and SETUP menu, ACTUATOR SETUP, PST SETUP routine, to set PST function behavior:

1. **PST mode:** OFF, AUTO, MANUAL
 - OFF: PST function disabled
 - AUTO: PST cycle carried out automatically and cyclically with time interval set by the parameter PERIOD and at time set by the parameter HOUR of DAY
 - MANUAL: PST cycle carried out on receiving of a remote hardwired PST signal or by local command available in the “VIEW and SETUP menu, Maintenance functions” of the actuator
 - MAN-AUTO: both automatic and manual mode initiate the PST function
2. **PERIOD:** time interval between PST's in days, configurable from 1 - 1000, in PST mode “AUTO”
3. **HOUR of DAY:** hour of PST, in hour, configurable from 0 - 23, in PST mode “AUTO”
4. **PST TRAVEL:** position travel during PST cycle, in % of position, configurable from 5 - 40. If actuator is fully open, it moves from 100% to “100-PST TRAVEL %”, if actuator is fully closed, it moves from 0% to “PST TRAVEL %”
5. **MAX T-PST:** max time allowed carrying out the PST TRAVEL, measured in % of relevant BASELINE time, configurable from 1 - 1000%
6. **MAX PST T-RET:** max time allowed to return to initial position, measured in % of relevant BASELINE time, configurable from 1 - 1000%
7. **PAUSE:** time of stay in position of actuator, in seconds, configurable from 2 - 255 s
8. **MAX PST OV-TR:** max position over-travel allowed to actuator during PST cycle, in percentage of position, configurable from 1 - 100

Section 3: Command to Initiate the PST Cycle

PST cycle initiates only if:

- actuator is fully open or closed
- local selector of actuator is in REMOTE or LOCAL
- local STOP, remote STOP (only in the option 4 wires mode) and ESD are not active

The parameter “PST mode” sets the following modes to initiate PST cycle:

- **“AUTO”**: the PST cycle initiates at the hour set by the parameter HOUR of DAY and when the time past from the last PST is equal to parameter PERIOD. The test is performed if the actuator local selector is in LOCAL or REMOTE.
- **“MANUAL”**: if the actuator local selector is in REMOTE, the PST is performed on receiving of the hardwired command on the terminal board. Terminal B4 is the input to perform PST in open direction and terminal B5 is the input to perform PST in close direction. Refer to relevant electrical diagram for wiring details. If the actuator local selector is in LOCAL, the PST can be initiated by the command available in the menu “VIEW and SETUP menu, SETUP, MAINTENANCE routines, PST cmd”.
- **“MAN-AUTO”**: both conditions described in “AUTO” and “MANUAL” initiate PST action.

Section 4: Reset of PST Cycle

PST cycle aborts in the following conditions:

- To move the actuator Local selector to OFF, LOCAL or REMOTE while PST cycle is in progress
- Alarm of electrical actuator
- To press the Local STOP pushbutton
- To press the remote STOP command (only if option “4-wires” is used, see Installation, Operation and Maintenance Manual, VCIOM-08500-EN, Remote Control)
- ESD command

Section 5: PST Curves and PST Baseline

During PST cycle, the actuator position % and the relevant time are collected in the RAM memory of the actuator. At the end of PST cycle, the PST profile (position versus time) is memorized in the permanent memory. The memory contains up to 16 PST profiles. When a new set of data is available, the oldest profile is deleted and the new one is stored.

By the command “SET PST REFERENCE”, available in the local operator interface, option “VIEW and SETUP menu, SETUP, MAINTENANCE” routines, 1 out of 16 “PST curves” can be copied and frozen in the “PST BASELINE” memory.

The BASELINE curve can also be done by the PST command, available in the “VIEW and SETUP menu, SETUP, MAINTENANCE, PST cmd” routines. By selecting the option “BASELINE”, the PST command causes the PST cycle execution and the collected data are saved in the PST BASELINE memory.

The “PST BASELINE” can be updated only by a new “SET PST BASELINE” command. By the comparison between PST BASELINE and PST curves, the actuator can produce status and warning useful in maintenance operation.

Section 6: PST Report and Warning

At the end of PST cycle, the new data collected are compared with the BASELINE and the setpoints “MAX T-PST, MAX PST T-RET, MAX PST OV-TR” to produce the following status and warnings:

Table 2.

Status	Description	Warning	Note
Passed	Test OK	-	No message on the actuator display
Reset	Test aborted	PST	See reset conditions
T-PST	Failed time T-PST	T-PST	See parameter MAX T-PST
T-RET	Failed time T-RET	T-RET	See parameter MAX T-RET
OV-TR	PST over-travel	OV-TR	See parameter MAX PST OV-TR
Failed	At least two of T-PST, T-RET, OV-TR, reset	Failed	-

Warnings can be viewed by the local operator interface of the actuator. Warnings are also recorded in the warning log registers (see Installation, Operation and Maintenance Manual, VCIOM-08500-EN, VIEW and SETUP Menu, Maintenance Routines).


Section 7: Remote Signalling

The following conditions can be individually configured to switch the auxiliary relays As1 - As8.

- PST active: PST cycle in progress.
- PST failed: it summarizes T-PST, T-RET, OV-TR and reset. The status of relay “PST failed” can be reset by a manual reset of warning via actuator local operator interface or alternatively by a new PST command.

Section 8: Local Operator Interface

 When PST cycle is in progress, the display of the actuator shows the message “PST ON”.



The following paragraphs report the instructions to operate with PST function by the Local Operator Interface of the actuator (refer to Installation, Operation and Maintenance Manual, VCIOM-08500-EN for detailed instruction relevant to configuration options via the Local Operator Interface).

8.1 Procedure to Initiate PST by Local Command

1. Move the local selector in OFF and then simultaneously press OPEN and STOP. Select the language, enter the password and press YES to select SETUP MODE (see Installation, Operation and Maintenance Manual, VCIOM-08500-EN, Local Controls).
2. Press NO and again NO until the display shows MAINTENANCE. Press YES.
3. Press NO to scroll the list of options and press YES when the display shows “PST cmd”.
4. Press YES to confirm “NEW BASELINE disabled”, press YES to execute a normal PST cycle, press NO and then YES to execute a “NEW BASELINE”.
5. Press YES to confirm and then move the local selector in LOCAL.
6. PST cycle starts, the ICON display shows the message “PST ON”.
7. At the end of PST cycle, the message “PST ON” disappears and actuator is available to normal operations.

8.2 Procedure to Select the Baseline

1. Move the local selector in OFF and then s and then simultaneously press OPEN and STOP. Select the language, enter the password and press YES to select SETUP MODE (see Installation, Operation and Maintenance Manual, VCIOM-08500-EN, Local Controls).
2. Press NO and again NO until the display shows MAINTENANCE. Press YES.
3. Press NO to scroll the list of options and press YES when the display shows “PST REFERENCE”.
4. In the menu SEL. CURVE select the curve number. Press NO to change, press YES to confirm. The most recent curve is the n°16 and the oldest one is the n°1.
5. Press YES to confirm. The display shows the message REFERENCE OK. Now the new BASELINE is the curve selected at the previous step.
6. The display returns to “SET PST REFERENCE”. Press simultaneously YES and NO to exit from menu.

8.3 Procedure to Set PST Parameters

Move the local selector in OFF and then press simultaneously OPEN and STOP



Press NO to scroll the list of languages and press YES when the display shows the desired language and to switch to next step



Press NO to select SETUP MODE



Enter password



Press YES to select SETUP MODE



Press YES to select ACTUATOR SETUP and switch to next step



Detailed instructions of the menu are in the Installation, Operation and Maintenance Manual of the actuator, VCIOM-08500-EN, Local Controls.

Press NO to scroll the list of options and press YES when the display shows "PST SETUP"



Press NO to select PST MODE. Options available are OFF, MANUAL, MAN-AUTO



Press YES if desired option is MANUAL and switch to next parameter PERIOD



Press YES if desired option is MAN-AUTO and switch to next parameter PERIOD



Press NO to change PERIOD. Press YES to set the PERIOD and switch to next parameter HOUR of DAY



Press NO to change HOUR of DAY. Press YES to set the HOUR of DAY and switch to next parameter PST TRAVEL



Press NO to change PST TRAVEL. Press YES to set the PST TRAVEL and switch to next parameter MAX T-PST



Press NO to change MAX T-PST. Press YES to set the MAX T-PST and switch to next parameter MAX PST T-RET



Press NO to change MAX PST T-RET. Press YES to set the MAX PST T-RET and switch to next parameter PAUSE



Press NO to change PAUSE. Press YES to set the PAUSE and switch to next parameter MAX PST OV-TR



Press NO to change MAX PST OV-TR. Press YES to set the MAX PST OV-TR and switch to PST SETUP



Press simultaneously YES and NO to exit from PST SETUP menu



Biffi Italia s.r.l.
Strada Biffi 165
29017 Fiorenzuola d'Arda (PC)
Italy
T +39 0523 944 411

For complete list of sales and manufacturing sites, please visit
www.biffi.it or contact us at biffi_italia@biffi.it

VCIOM-16358-EN (PC-15051) ©2022 Biffi. All rights reserved.

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.

